



Installing your LeakBot

 
Help & Guidance



1 LeakBot needs to be clipped directly on your home's internal mains water supply pipe that supplies all the fresh cold water to the property. This is the same pipe that your internal stop tap, or stopcock is always found on.

2 Your internal mains water supply pipe will be located on the ground floor in one of the following locations:

- under the kitchen sink
- a garage
- a utility room
- a cellar
- a downstairs bathroom
- under the stairs

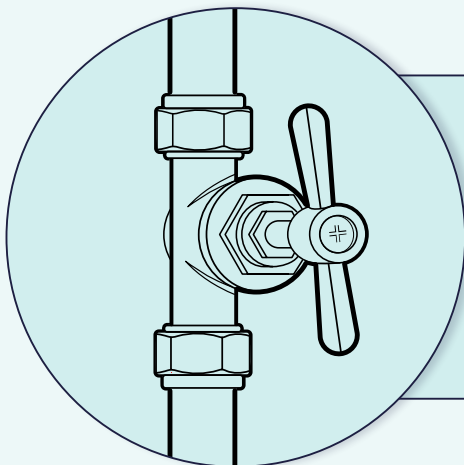

Example of a typical internal stop tap, although appearance may vary slightly. If this stop tap turns all the fresh cold water off inside your home you have located your internal mains water supply pipe.

If you have any questions or need help please visit leakbot.io/support or email us at support@leakbot.io

 
Placing LeakBot on the pipe

Step 2

Once you have located your internal mains water supply pipe, you will need to install LeakBot between 30cm to 50cm along the pipe from the point it enters the property and before the pipe branches off around the property.

Please note: If the internal mains water supply pipe is made from lead, LeakBot will need to be installed between 40cm to 60cm along the pipe from the point it enters the property and before the pipe branches off around the property.

Clip LeakBot to the internal mains water supply pipe between 30 - 50cm from the point the pipe enters the property.

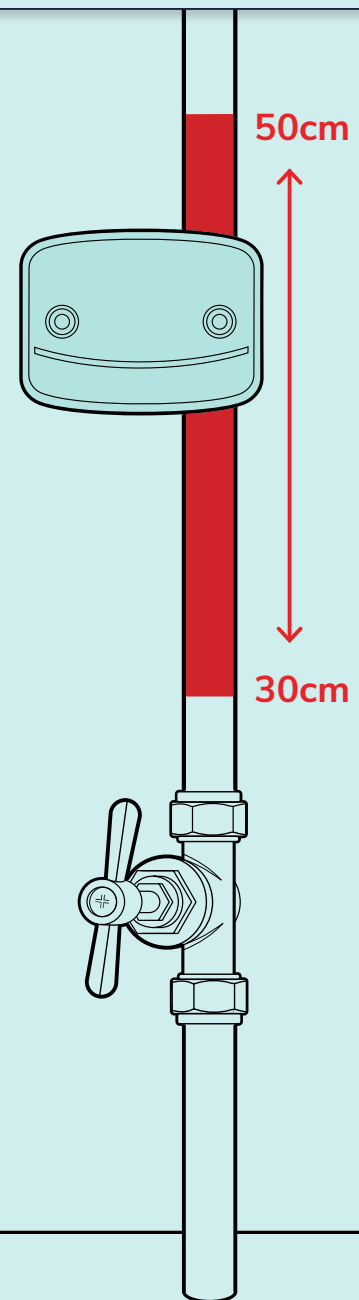

If you have any questions or need help please visit leakbot.io/support or email us at support@leakbot.io

 
Positioning LeakBot correctly

Step 3

Once you have clipped LeakBot to the pipe, it's important it is facing the right way.

- LeakBot can be placed horizontally or vertically.
- Wherever possible LeakBot should be installed with its clip, (the rear of the device) facing towards the outer wall of your property.
- If installed on a horizontal pipe, LeakBot ideally needs to be twisted around so that it sits above the pipe.

LeakBot can be positioned horizontally or vertically. If placed horizontally try to position above the pipe as shown.

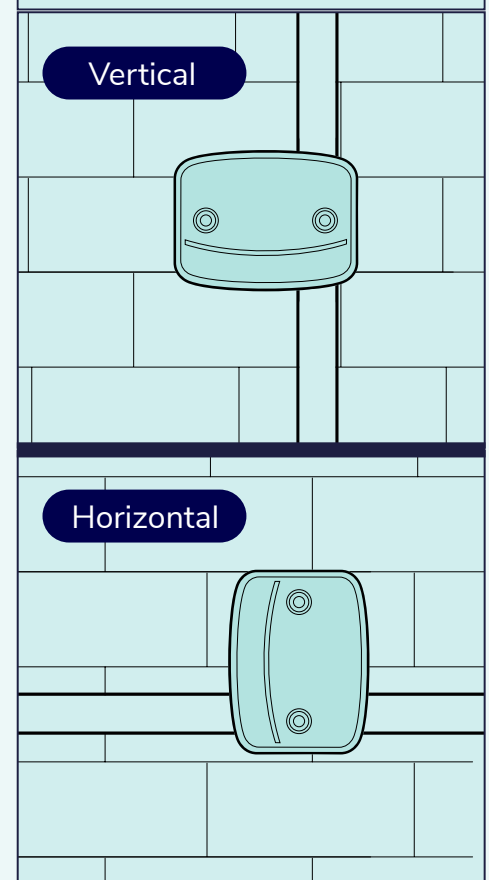

If you have any questions or need help please visit leakbot.io/support or email us at support@leakbot.io

Useful information

Pipe size

- LeakBot is designed to fit all standard UK pipework sizes - 15mm, 22mm and 28mm diameter pipes
- The clip can not be adjusted or removed to fit larger pipe sizes.

Pipe material

LeakBot can be fitted on all types of pipe material including copper, plastic, lead and stainless steel

Insulated pipes below LeakBot

If there is any pipe insulation below where the LeakBot is installed it should be removed as this impacts LeakBot's ability to work effectively.

Limited or no access to pipework

In certain scenarios access to pipework can be limited. It could be hidden behind a kitchen cupboard or boxed in. In these situations the only way to install LeakBot correctly would be to create sufficient access that allows LeakBot to be clipped to the pipework.

If you have any questions or need help please visit leakbot.io/support or email us at support@leakbot.io
